

Lexan Fixed Mounting Kit


This hardware is included with composite exterior shutter panels to assist in a secure and speedy fixed installation.

Mounting hardware included (per pair of shutters):

4 PolyCarbonite "L" Brackets the same width as shutters

4 PolyCarbonite "L" Brackets 2" tall if shutters are over 55" in height

8 Stainless Steel 1" Screws (12 if shutters exceed 55")

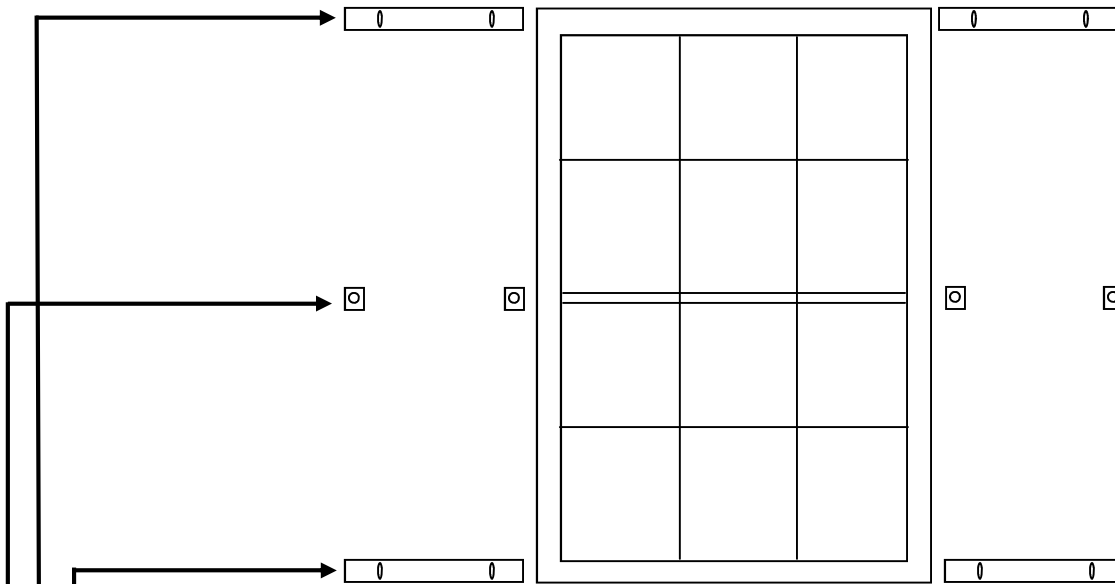

Instructions

Determine proper position for mounting brackets using above diagram. Drill holes in house for long screws included in packet. (Drill 1/4" hole to insert plastic anchors if in masonry.)

Measure the height of shutter and drill holes for top brackets. Screw all brackets to wall.

If shutter exceeds 55", mount additional small brackets as shown in center of shutter.

Place shutter on lip of bracket and push back as far as possible. Mark shutter to pre-drill holes into shutter from top and bottom of mounting brackets, using a 1/8" bit. OR leave shutter in proper position and drill into shutter while it is sitting on bracket if someone can help hold shutter panel in place. DO NOT insert screws without pre-drilling; the material may split.

Insert short screws through bracket and into shutter panel. Tighten screws snugly, but do not over-tighten.



888-399-4947

S H U T T E R L A N D . C O M