

Lexan Fixed Mounting Kit


This hardware is included with composite exterior shutter panels to assist in a secure and speedy fixed installation.

Mounting hardware included (per shutter):

2 PolyCarbonite "L" Brackets the same width as shutter

2 PolyCarbonite "L" Brackets 2" tall if shutter is over 55" in height

4 Stainless Steel 1" Screws (12 if shutter exceeds 55")

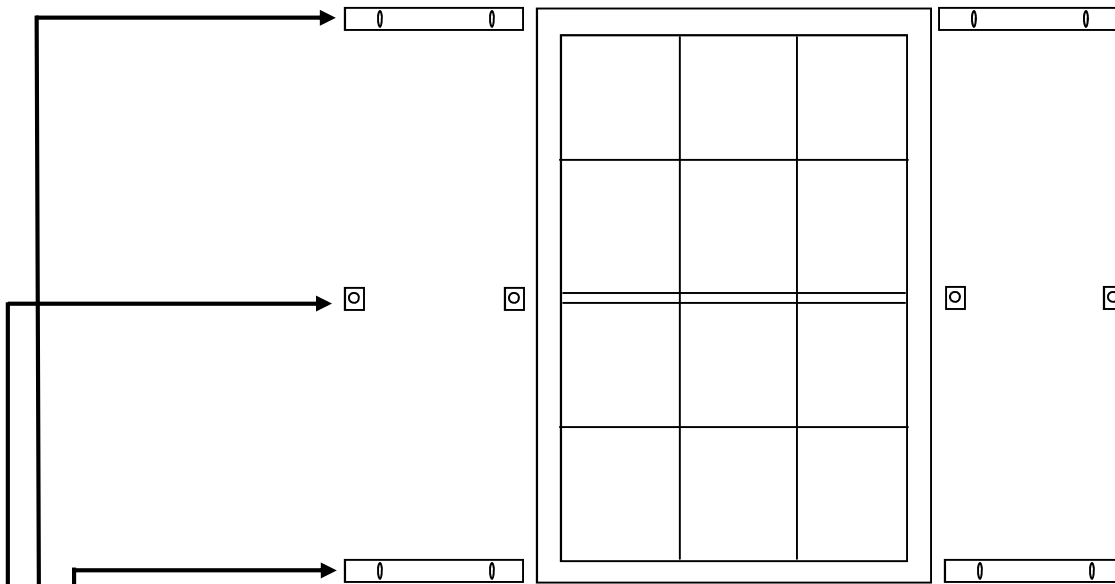

Instructions

Determine proper position for mounting brackets using above diagram. Drill holes in house for long screws included in packet. (Drill 1/4" hole to insert plastic anchors if in masonry.)

Measure the height of shutter and drill holes for top brackets. Screw all brackets to wall.

If shutter exceeds 55", mount additional small brackets as shown in center of shutter.

Place shutter on lip of bracket and align the pre-drilled hole in the bracket with the center of the shutter depth (5/8" from the back of the shutter). Mark the position of all four pilot holes with a pencil at the top and bottom of the shutter. Remove the shutter and use a 1/8" bit to drill all of the pilot holes as deep, or slightly deeper, than the screw.

DO NOT insert screws without pre-drilling; the material may split.

Return the shutter to the window edge and insert the included short screws through the bracket and into the shutter panel. Hand tighten all four screws snugly, but do not over-tighten.

